 

OPERATING MANUAL

The Guardian[®] Hand Held Security Metal Detector

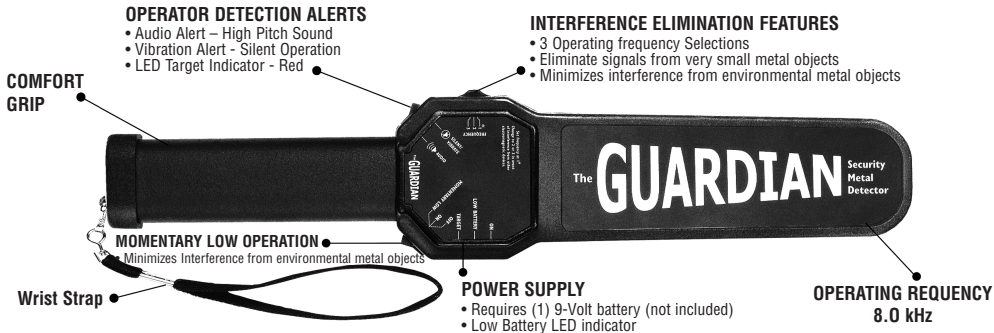



DETECTOR FEATURES

1. Quick-Change Battery Compartment

Use a coin or screwdriver to open compartment.

Insert circular cam lock and twist to secure in closed position.

2. All-Metal Detection

Detects all types of metals.

Will not detector non-metallic objects or weapons that do not contain metal.

3. Momentary Low Detection

While holding down the "Momentary Low" switch, the detection range will be reduced.

- a) Very small metal objects, such as the metal rivets sewn into clothing, will not be detected beyond a range of one inch from the object.

- b) Large environmental metal objects, such as the metal reinforcing bars in floors, will not be detected beyond a range of several inches.

Upon release of the "Momentary Low" switch, the detector will return to Normal Operation.

4. Silent Operation

Position the Silent/Audio switch in the "Silent/Vibrate" position and:

- a) The detector will NOT emit an audible tone upon the detection of metal objects.
- b) The vibrator will activate upon the detection of a metal object, and the "Target" LED indicator will illuminate.

5. Operating Frequency Selection

Chose from two alternate operating frequencies in the event of electromagnetic interference from other electronic devices.

6. Low Battery Indication

When battery needs to be replaced:

- a. Low Battery LED will illuminate.
- b. Detection Tone will stay on momentarily after sweep past metallic object is complete.

7. Visual Target Response

Red LED flashes when a metal object is located

8. Conform Hand Grip and Removable Wrist Strap

First Time Operation

To Operate the Detector,

- 1) Install the Batteries
 - a. Use a 9-volt ALKALINE battery only
 - b. Install battery with correct polarity
(align "+" on detector housing with "+" on battery)
 - c. The battery cover opens and closes with a coin or screwdriver
- 2) Set the On switch to "ON"
"ON" is the middle position
- 3) Set the Audio/Vibrate Switch to "AUDIO"
- 4) Sweep the Detector over the target area.
Detector must be IN MOTION to detect metal
- 5) Read this manual for proper training in the detection of metal objects

Batteries

Use 9-Volt **ALKALINE** battery only

 
Low Battery Alert

The Yellow LED indicator light will illuminate and remain illuminated when the batteries are discharged to the point at which the detector has lost 10% of its metal detecting range.

The audible alert will also lengthen (the tone will sound for a longer period of time) upon detection of a metal object, when the batteries become discharged to the point at which the detector has lost 10% of its metal detecting range.

The detector will continue to operate, at a lower sensitivity, when the Low Battery Indicators are activated. Replace batteries as soon as possible after these indicators activate.

If you plan to store the GUARDIAN™ for several days or more, remove the battery.

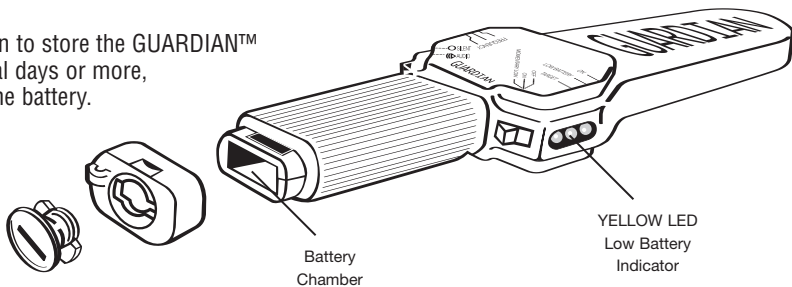

Power Switch with Momentary Low

The Power switch has 2 "ON" positions and a forward "OFF" position.

The detector is OFF with the switch in the "UP" position

 
The detector is ON with the switch in the "MIDDLE" position

The detector is in **MOMENTARY LOW** operation with the switch held in the "DOWN" position.

While holding down the "Momentary Low" switch, the detection range will be reduced


- Very small metal objects, such as the metal rivets sewn into clothing, will not be detected beyond a range of one inch from the object.
- Large environmental metal objects, such as the metal reinforcing bars in floors, will not be detected beyond a range of several inches.

Upon release of the "Momentary Low" switch, the detector will return to Normal Operation

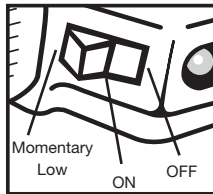

LED Indicators

 - The GREEN light indicates that the detector is ON
- The YELLOW light indicates LOW BATTERY
- The RED light indicates the detection of a metal object

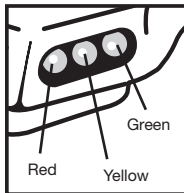

Body Scanning for the Detection of Metal Objects

Always test the detector before operation. Sweep the detector across a known metal object, and verify detection with audio, vibratory, and visual feedback.

Motion is Required: The metal detector must be IN MOTION, sweeping across the target area, to detect the presence of metal.

The subject should stand upright, with arms and legs extended.



Sweep the detector over the subject, with a smooth, even motion, about one inch from the body. Do not make physical contact between the subject and the detector.

Press and Hold the "Momentary Low" switch to eliminate interference from the metal bars in floors, or from very small metal objects, such as rivets or zippers sewn into clothing.

CAUTION: Use in the MOMENTARY LOW mode will desensitize the detector. Use the Momentary Low switch only after the detection of metal, and the verification of the absence of a larger metal object

Scanning Personnel in security situations should be properly trained and supervised. This detector will not detect non-metallic objects.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, Radio Shack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, Radio Shack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF Radio Shack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. In the event of a product defect during the warranty period, take the product and the Radio Shack sales receipt as proof of purchase date to any Radio Shack store. Radio Shack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of Radio Shack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period. This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lighting or other incidence of excess voltage or current; (b) any repairs other than those provided by a Radio Shack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. Radio Shack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102